

# LK Radiator Fixture Spacer

## TABLE OF CONTENTS

Design	1
Assembly Instruction	1

## DESIGN

**Art.No: 481 00 48 (two spacers)**

LK Radiator Fixture Spacer for Quattro connection:


- With the accessory LK Radiator Fixture Spacer, two LK Radiator Fixtures UNI can be assembled together to fix pipes to a radiator with quattro connection.
- The LK Radiator Fixture Spacer can be easily assembled and disassembled for reuse.
- LK Radiator Fixture Spacer is available in versions for the respective measurements of the quattro connection, 40-50-40 c.t.c or 50-50-50 c.t.c.
- Two LK Radiator Fixture Spacer comes with two nuts each.
- LK Radiator Fixture Spacers are attached to both ends on the LK Radiator Fixture UNI.
- Tools are not included in the delivery.



*LK Radiator Fixture Spacer with two nuts.*

## ASSEMBLY INSTRUCTION

1. Bend the metal flap 90 degrees upwards on the same side as the fixed screws.

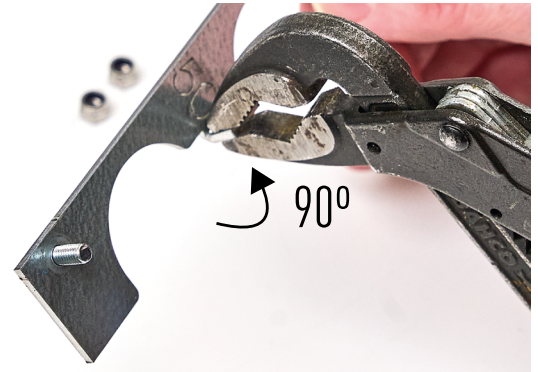

*Bending the metal flap upwards.*

2. Assemble two LK Radiator Fixture Spacers with two LK Radiator Fixtures UNI. The spacers must face inwards towards the LK Radiator Fixtures UNI and the metal flaps must face upwards. LK Radiator Fixture Spacer has two fixed screws that are threaded through the holes on the LK Radiator fixtures UNI.



*The metal flap is facing upwards. Tools not included.*

3. Screw on and tighten the two nuts.



*Mounted spacer.*

