


LK Automatic Air Vent RF

MOUNTING

The aerator should be mounted in an upright position. To facilitate assembly, the aerator is equipped with a self-sealing o-ring for fitting into the LK Manifold VKF RF.

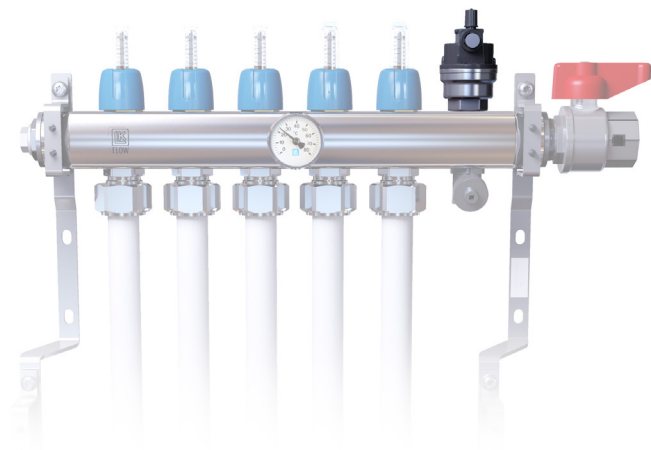

TECHNICAL DATA

Article no.	241 72 99
Max pressure	10 bar
Max temperature	120 °C
Connection	1/2"

IMPORTANT

The aerator has a manual and automatic venting function. The upper black vent cap opens for manual aeration. When using the automatic venting feature the top black cap should be closed and the gray air screw should be rotated one turn into an open position. The automatic venting feature facilitates air aeration at start up. The air screw should be closed after approximately 1 month of use.