


Quick Guide

- LK Smartplug modul WSS (RSK 188 23 20)
- LK Smartplug modul WSS WSS (NRF 836 42 49)
- LK Smart etäkytkin WSS (LVI 457 97 14)
- LK Smartplug module WSS (Art. No. 188 23 20)




- 1.** Anslut modulen till huvudenheten | Koble modulen til hovedenheten
Kytke moduuli keskusyksikköön | Connect the module to the master unit

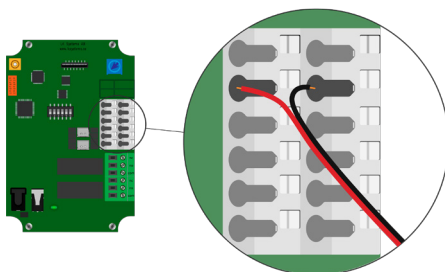

Plint 5 | Klemme 5
Liittimestä 5 | Terminal 5



- 2.** Anslut modulen till nätdaptern | Koble modulen til trafo:n
Kytke moduuli virtalähteeseen | Connect the module to the power supply

 

- 3.** Anslut nätdaptern till extern styrning | Koble trafo:n til ekstern kontroll
Kytke virtalähde ulkoiseen ohjaukseen | Connect the power supply to external control

